

Centerboat-n-Slip

Recommended Configuration

One Center-Slip for the bow and one Center-Slip for the stern.

Installation Location



If you board your boat from the *port* side, mount the Center-Slip on the pilings located on the *starboard* side of the boat (always mount the Center-Slip on the opposite side from which you board).

Installation

Remove cover. Locate top mounting hole of Center-Slip approximately 1 foot above boat deck at maximum high tide. Drill proper size hole for 1/2 inch by 3 1/2 inch stainless steel or galvanized lag bolt with washer. Use equivalent diameter concrete anchors or studs for concrete pilings. Install lag bolt through top mounting hole in slip reel (snug). Then mark piling for second fastener location and install bottom lag. Firmly tighten both fasteners.

Rigging

Install two static lines to cleats on the dockside of the boat; one for the bow and one for the stern. Adjust static lines so boat is centered in slip during midtide. Forward or back preventer lines may be installed as shown in sketch below, or from piling to amid ship cleat. Mark line or use loop ends so it will be attached to the same length each time boat returns. Attach slip reel lines to cleats on the other side of the boat. If more tension is required, simply pull more line from the slip reel, then attach.

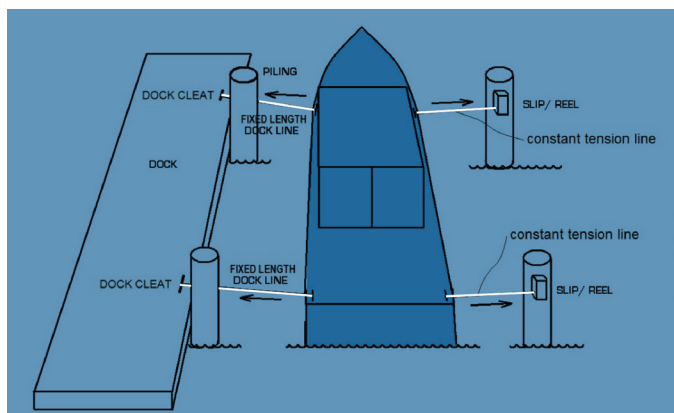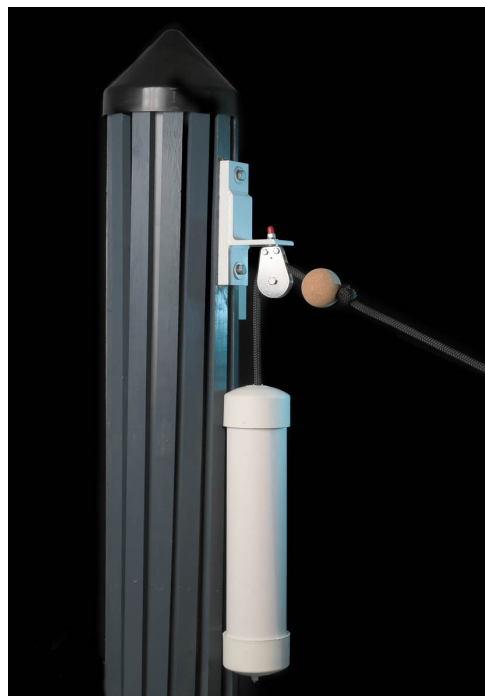

Telephone Support

941-408-4373

Mon–Fri 8:00 am–5:00 pm (EST)

Email

info@dockingproducts.com

dockingproducts.com

